


Adjust the front caster angle by changing the "Eccentric Bushing" on the front lower arm.
The final caster also depends on the kick-up setting.

TOTAL CASTER = CHASSIS KICK-UP + C-HUB CASTER + ARM SHAFT KICK-UP

Example:
Total Caster 19' = Chassis Kick-up 5' + C-hub Caster 12' + Arm Shaft Kick-up +2'
Total Caster 15' = Chassis Kick-up 5' + C-hub Caster 12' + Arm Shaft Kick-up 0'
Total Caster 15' = Chassis Kick-up 5' + C-hub Caster 12' + Arm Shaft Kick-up -2'

Caster angle	Characteristics
Less caster	Increases off-power steering into a corner. Decreases on-power steering out of and in a corner. Decreases straight-line stability.
More caster	Decreases off-power steering into a corner. Increases on-power steering out of and in a corner; Increases straight-line stability.


FF	FR	Arm Shaft Kick-Up	Total Caster *
0:-0			
1	(Reverse)	+2°	19°
0.5	(Reverse)	+1.5°	18.5°
1	0	+1°	18°
0.5)	0	+0.5°	17.5°
0	0	0°	17°
0	0.5	-0.5°	16.5°
0	1	-1°	16°
(Reverse)	(0.5)	-1.5°	15.5°
(Reverse)	1	-2°	15°

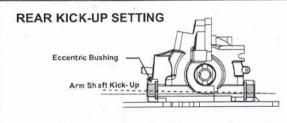

Rear Kick-Up	Characteristics
Less Rear Kick-Up	Absorb road shock less. Applicable flat surface.
More Rear Kick-Up	Absorb road shock more. Applicable uneven surface.

RF	Rear Kick-Up
0 0 0-27 0 0	1976
3.3	2.8°
3	2.5°
2.5	2°
2	1.5°
(Reverse)	1°
(Reverse)	0.5°
(Reverse)	0°

REAR TOE-IN SETTING

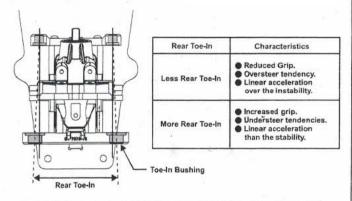

RR	Rear Toe-In
□ ⊙ Z-3.5 ⊙ □ −	
L3.5 R3.5	3.5°
L3.3 R3.3	3.3°
L3 R3	3°
L2.5 R2.5	2.5°
L2 R2	2°